



OLIGHT

USER MANUAL

M2R WARRIOR

INSIDE THE BOX
M2R Warrior, 18650 (3500mAh) Lithium battery, USB Magnetic Charging Cable, Holster, Lanyard, User Manual

SPECIFICATIONS

Material: AL6061-T6 aluminum alloy unibody design with Mil-Spec Type-III hard anodizing, along with blue bezel ring and stainless clamping ring on the switch.

	4.9Ah	IP88	CREE XHP35	(0.55Ω 10Ω 1Ω)	5.4oz / 155g (including battery)
Turbo	High	Med 1	Med 2	Low	Moon
1500	>700	700	250	60	15
LUMENS	LUMENS	LUMENS	LUMENS	LUMENS	LUMENS
1500	>700	700	250	60	15
1500	>700	700	250	60	15
208 m	180m	150m	93 m	56 m	32 m

The tests are performed using one 18650 (3500mAh) Lithium battery.


BATTERY INSTALLATION

Remove the product from the packaging. Before your first use, unscrew the tailcap and remove the insulating film within the battery compartment before screwing the tailcap back on tightly. If the battery needs to be changed, make sure that the negative polarity of the battery faces toward the direction of the flashlight head (the side of the LED).


AVAILABLE BATTERIES

* 1 x 18650 Lithium Battery
 Insulating film
Before first use, unscrew the tailcap and take off the insulating film.


CHARGING
Charge the flashlight before use. Connect the USB end of the magnetic charging cable to an external USB power source (USB power source is not included in the package). Users can charge it through any USB power source such as a computer or wall adapter) and attach the other end to the tail cap of the flashlight. The indicator will glow red when it is charging, and glow green when it is fully charged or on standby.

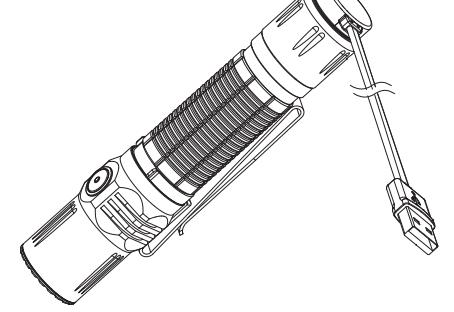

If you are using this light for self-defense or need quick access to strobe mode for a better tactical experience, switch to the enhanced tactical operation mode before use.

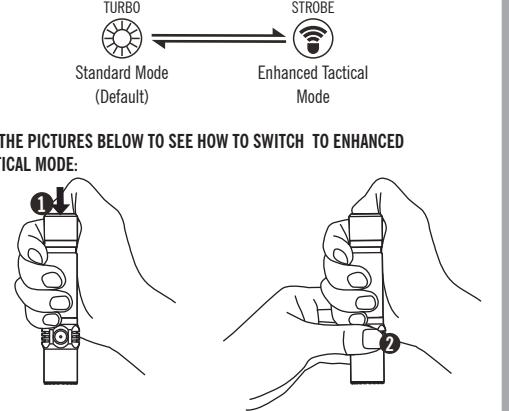

SEE THE PICTURES BELOW TO SEE HOW TO SWITCH TO ENHANCED TACTICAL MODE.

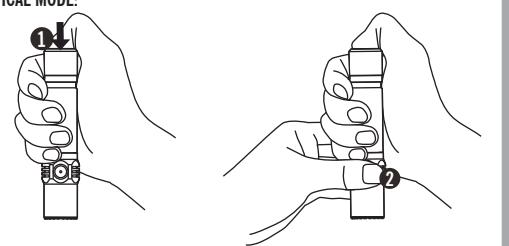

1. Deep press and hold the tail switch
2. Single click the side switch to shift the mode

CONTENTS

(EN) English	01
(CHS) 简体中文	02
(FI) Finnish	03
(NO) Norwegian	04
(SV) Swedish	05
(NED) Nederland	06
(PL) Polska	07
(DE) Deutsch	08
(HU) Magyarország	10
(RU) Русский	11
(ES) Español	13
(RO) Româncă	14
(JP) 日本国	15
(KR) 한국	16
(FR) Français	18
(BG) български	19
(IT) Italia	20
(SK) Slovenský jazyk	22

01

(EN) English

HOW TO OPERATE

SIDE SWITCH

ON/OFF: Single click the side switch to turn the light ON/OFF. When the light is turned on again, it will return to the previously memorized mode.

CHANGE BRIGHTNESS LEVEL: When the flashlight is on, press and hold the side switch and it will start from the present brightness level automatically cycle through low, med2, med1, and high mode. This is selected when the side switch has been released. (Please note, moonlight and strobe function are not included in this cycle).

MOONLIGHT MODE: When the flashlight is off, press and hold the side switch for over 5 seconds to activate moonlight mode. If the memorized mode is moonlight, simply click the switch to access it.

DIRECT ACCESS TO TURBO MODE: Quickly double click the side switch to access high mode. Double click the side switch again to enter turbo. (turbo will automatically be switched to high in three minutes).

STROBE: Quickly triple click the side switch to enter the strobe mode. To quit this mode, single click or press and hold the side switch.

LOCKOUT/UNLOCK: When the flashlight is off, press and hold the side switch for over 5 seconds to access the button lock mode (the flashlight will enter the moonlight mode first and will then switch off to signal the lockout mode). Under the lockout mode, press and hold the side switch for less than one second. The red indicator below the side switch will be on for two seconds to signal that the light is still in lockout mode. To unlock it, keep holding the side switch for over one second until the moonlight mode is on again.

TAIL SWITCH

The tail switch features either standard or enhanced tactical operation modes.

SOFT PRESS: Turbo mode activated for momentary on (standard 1.000 lumens; enhanced tactical: 1.500 lumens).

DEEP PRESS: Standard - Constant on Turbo mode. Enhanced tactical - momentary strobe mode.

SWITCH BETWEEN OPERATION MODES:

METHOD 1: Deep press the tail switch and hold it while clicking the side switch at the same time to shift between for constant on (standard mode) and momentary strobe (enhanced tactical). Release the tail switch to stay on the setting you chose.

METHOD 2: When the flashlight is on, press and hold the side switch to cycle through low, medium, and high. After it cycles through 3 times, it will then cycle between turbo (standard mode) and strobe (enhanced tactical). Release side switch to stop on the setting you chose.

NOTE: If the battery was not at least 6A, it will not support the 1.500-lumen turbo mode. If the tail switch has been set to enhanced tactical mode, the flashlight cannot be used.

02

turned on via the tail switch. If this happens, to activate the tail switch, press and hold the side switch to set it back to the standard mode (follow method 2).

(CHS) 简体中文

操作说明

侧按键

开关机: 单按开、关机。开机时，手电点亮在记忆存储的亮度。

调光: 按住侧键设置亮度进入月光模式、低、中、高模式。侧键释放后自动循环到月光模式。

月光模式: 当手电关机时，按住侧键超过5秒进入月光模式。侧键释放后自动循环到月光模式。

快速双击: 快速双击侧键进入高亮，在高亮状态再次双击侧键切换到涡流模式。

快闪: 快速三连击侧键进入快闪模式。单按或长按侧键退出爆闪。

锁键与解锁: 关机状态下，按住侧键进入月光，月光亮起，如前次关机为月光，单按侧键。

快速高亮: 快速双击侧键进入高亮，在高亮状态再次双击侧键退出涡流。

爆闪: 快速三连击侧键进入爆闪模式。单按或长按侧键退出爆闪。

尾键与尾键: 关机状态下，按住尾键进入月光，月光亮起，如前次关机为月光，单按尾键。

尾键与尾键: 关机状态下，按住尾键进入月光，月光亮起，如前次关机为月光，单按