


IN THE BOX


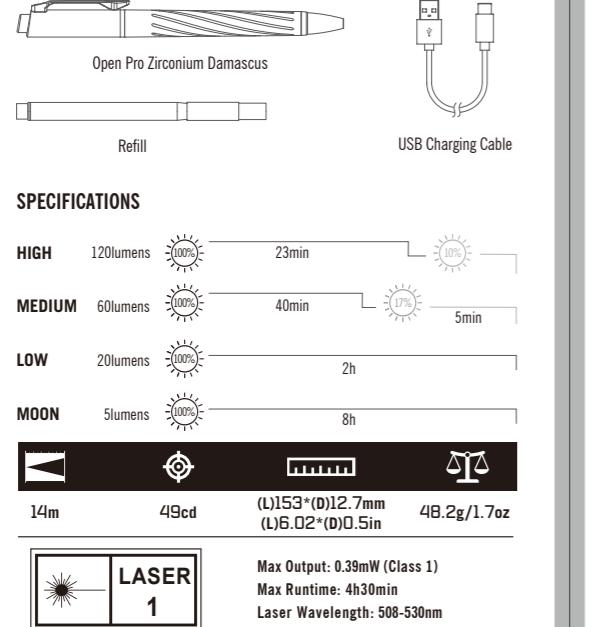


NOTE:

- * Slide up the button (in the direction of the arrow) to operate the LED light (please refer to the operating instructions for specific operation).
- * The pen tip is protected by wax. Please remove the protective wax before writing.

CHARGING

Before first use, please fully charge the product. Unscrew the pen from the middle and store the lower part (pen). Connect the upper part to the USB power supply or computer USB port via the provided charging cable (USB power supply not included). Users can use any USB power supply of digital devices or household appliances. The indicator lights up red to indicate charging, and the red will go out when it is fully charged.

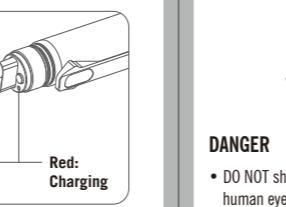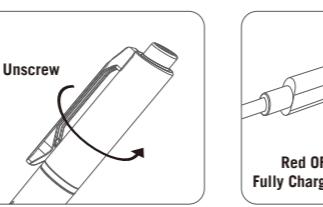


DANGER

- DO NOT shine the light directly into human eyes. This may cause temporary blindness or permanent damage to the eyes.
- DO NOT cover the flashlight with objects, the heat generated by flashlight may cause burning or even cause unexpected disasters.
- Keep out of reach of children. DO NOT allow children to play to prevent physical harm.
- Built-in lithium battery, please DO NOT drop or hit heavy objects.



REFILL REPLACEMENT

- a. Unscrew the tip, take out the refill and remove the spring from the refill.

Note: Please remove the spring from the refill carefully and DO NOT stretch it.

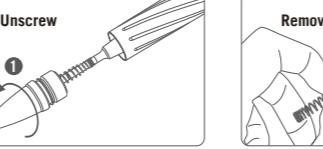

- b. Install the spring with the narrow end first on the new refill, then put the new refill back into the pen and tighten the tip.

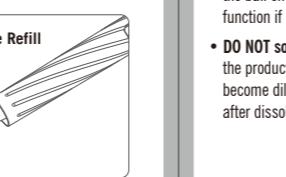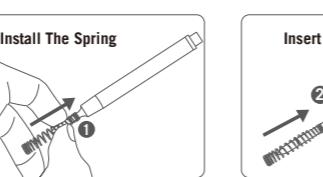

O'Pen Pro Zirconium Damascus (LIMITED EDITION)

Thank you for purchasing this Olight Product. Please read this manual carefully before use and keep it for future reference!

NOTICE

- When the battery level is less than 5%, the maximum output is limited to 5 lumens.
- The product adopts PWM dimming, which may cause noise when placed close to the radio.
- The clip is suitable for clamping on objects not more than 3mm thick.
- When replacing the refill, be careful not to deform the spring, as this may affect the use of the refill.
- Writing on soft or padded surfaces may result in thicker lines.
- Please keep the top lens of the pen cap clean, otherwise it may affect the use of the green beam.

EXCLUSION CLAUSE

Olight is not liable for damages or injuries sustained resulting from the usage of the product inconsistent with the warnings in the manual.

CONTENTS

(EN) English - - - - - 01

(CN) 简体中文 - - - - - 01

(FI) Finnish - - - - - 02

(NO) Norwegian - - - - - 02

(SV) Swedish - - - - - 03

(NL) Nederlands - - - - - 04

(PL) Polska - - - - - 04

(DE) Deutsch - - - - - 05

(HU) Magyarország - - - - - 06

(RU) Русский - - - - - 06

(ES) Español - - - - - 07

(RO) Romanianesc - - - - - 08

(UA) Ukrainian - - - - - 08

(JP) 日本語 - - - - - 09

(KR) 한국어 - - - - - 10

(TH) ไทย - - - - - 11

(FR) Français - - - - - 11

(IT) Italia - - - - - 12

(SK) Slovenskýjazyk - - - - - 13

(EN) English

HOW TO OPERATE

Used as a pen:

Gently slide the pen push button along the L-shaped track to the bottom, the tip will appear and be locked, then you can start writing. Release the pen push button to the top of the L-shaped track, the tip will bounce back into the pen.

Used as a flashlight:
ON/OFF: Slide up the button to turn the light ON (the default output is 5 lumens) / AV

ENDRE LYSSYTYKE: När lyser er på, skyv knappen opp raskt til ganger for å aktivere sterkt hvitt lys. Skyv til ganger for å returnere til moonlight-modus. Når hvitt lys er aktivert, skyv knappen raskt til ganger for å aktivere sterkt hvitt lys, skyv knappen til ganger for å returnere til memorert lysstyrke (skyv opp til ganger for å returnere til sterkt lys).

GRONN STRÅLE: Når lyser er av, skyv og hold knappen for å aktivere grønn stråle, skyv opp én gang for å skru inn.

HIGH WHITE LIGHT: When the light is off, quickly slide up the button twice to access high white light directly, slide up twice again to return moonlight mode.

When the white light is on, quickly slide up the button twice to output high light, slide up twice again to return the memorized brightness level (slide up twice to return medium in high light mode).

GREEN BEAM: When the light is off, slide up and hold the button to output the green beam, single slide up to turn it off.

(CN) 简体中文

操作说明

当作笔使用

轻推笔身中部手柄，沿L形轨道滑至底部，笔尖伸出并锁定，可以开始书写；释放手柄至L形轨道上端，笔尖收回至笔头内。
当作为照明灯使用：

开/关机：向上推动笔身中部手柄开/关机，开机默认5流明（月光档）。

改变亮度：开机状态下，向上长推笔身中部手柄依次为低亮档→中亮档→高亮档→低亮档；



直接高亮：关机状态下，向上快速推动手柄两次输出高亮档，再次快

NOTE:

- * Side up the button (in the direction of the arrow) to operate the LED light (please refer to the operating instructions for specific operation).
- * The pen tip is protected by wax. Please remove the protective wax before writing.

CHARGING

Before first use, please fully charge the product. Unscrew the pen from the middle and store the lower part (pen). Connect the upper part to the USB power supply or computer USB port via the provided charging cable (USB power supply not included). Users can use any USB power supply of digital devices or household appliances. The indicator lights up red to indicate charging, and the red will go out when it is fully charged.

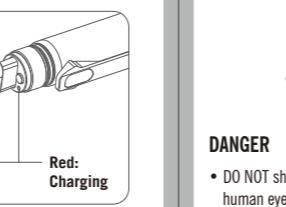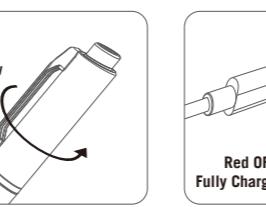


DANGER

- DO NOT shine the light directly into human eyes. This may cause temporary blindness or permanent damage to the eyes.
- DO NOT cover the flashlight with objects, the heat generated by flashlight may cause burning or even cause unexpected disasters.
- Keep out of reach of children. DO NOT allow children to play to prevent physical harm.
- Built-in lithium battery, please DO NOT drop or hit heavy objects.



REFILL REPLACEMENT

- a. Unscrew the tip, take out the refill and remove the spring from the refill.

Note: Please remove the spring from the refill carefully and DO NOT stretch it.

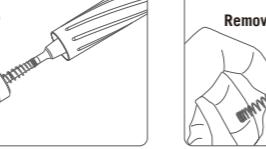

- b. Install the spring with the narrow end first on the new refill, then put the new refill back into the pen and tighten the tip.

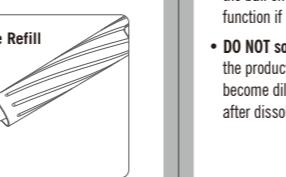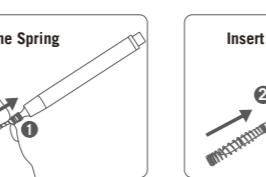


WARNING

- If you have used it in a watery environment, please keep the product clean and dry before charging.
- Beware of dropping:** The refill inside is a precision assembly product, and the ball on the tip may lose its writing function if damaged.
- DO NOT soak in water:** The refill of the product uses gel ink. The ink will become diluted or unable to write after dissolved in water.


PRODUCT OVERVIEW

The product is separable, the lower part is a pen, the upper part is a flashlight and a central ring used as a separation point.

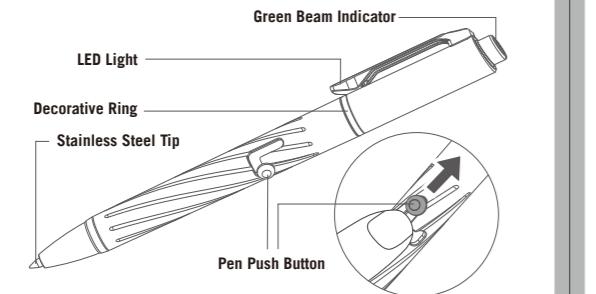

Thank you for purchasing this Olight Product. Please read this manual carefully before use and keep it for future reference!

IN THE BOX

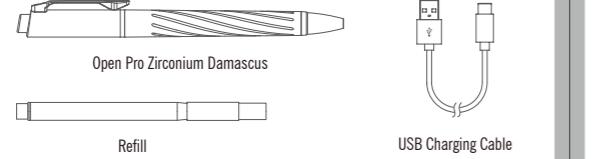

SPECIFICATIONS


HIGH	120lumens	23min
MEDIUM	60lumens	40min
LOW	20lumens	2h
MOON	5lumens	8h

14m	49cd	(L)153.7(D)17.7mm (L)6.02"(D)0.5in	48.2g/1.7.oz
LASER			Max Output: 0.39mW (Class 1) Max Runtime: 4h30min Laser Wavelength: 508-530nm

All above specifications are test results based on ANSI/NEMA FL1-2009 Standard.

PRODUCT OVERVIEW

The product is separable, the lower part is a pen, the upper part is a flashlight and a central ring used as a separation point.

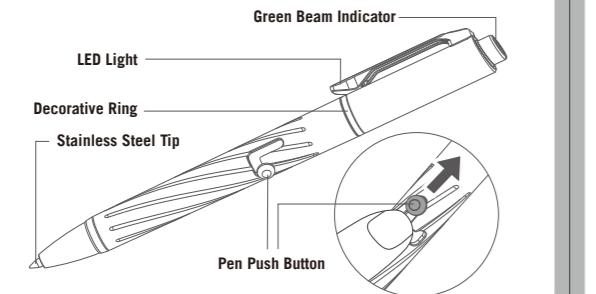

Thank you for purchasing this Olight Product. Please read this manual carefully before use and keep it for future reference!

NOTICE

- When the battery level is less than 5%, the maximum output is limited to 5 lumens.
- The product adopts PWM dimming, which may cause noise when placed close to the radio.
- The clip is suitable for clamping on objects not more than 3mm thick.
- When replacing the refill, be careful not to deform the spring, as this may affect the use of the refill.
- Writing on soft or padded surfaces may result in thicker lines.
- Please keep the top lens of the pen cap clean, otherwise it may affect the use of the green beam.

EXCLUSION CLAUSE

Olight is not liable for damages or injuries sustained resulting from the usage of the product inconsistent with the warnings in the manual.

CONTENTS

- (EN) English - - - - - 01
- (CN) 简体中文 - - - - - 01
- (FI) Finnish - - - - - 02
- (NO) Norwegian - - - - - 02
- (SV) Swedish - - - - - 03
- (NL) Nederlands - - - - - 04
- (PL) Polska - - - - - 04
- (DE) Deutsch - - - - - 05
- (HU) Magyarország - - - - - 06
- (RU) Русский - - - - - 06
- (ES) Español - - - - - 07
- (RO) Romanianesc - - - - - 08
- (UA) Ukrainian - - - - - 08
- (JP) 日本語 - - - - - 09
- (KR) 한국어 - - - - - 10
- (TH) ไทย - - - - - 11
- (FR) Français - - - - - 11
- (IT) Italia - - - - - 12
- (SK) Slovenskýjazyk - - - - - 13